

Operation & Maintenance Manual

HYDRAULIC
EXCAVATOR

PC45MR-3
PC55MR-3

SERIAL NUMBERS PC45MR- 5001 and up
PC55MR- 15001

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU

CONTENTS

FOREWORD	1- 1
FOREWORD	1- 2
SAFETY INFORMATION	1- 3
INTRODUCTION	1- 5
DIRECTIONS OF MACHINE	1- 5
PRODUCT INFORMATION	1- 6
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE	1- 6
ENGINE SERIAL NUMBER PLATE AND ITS LOCATION	1- 6
EPA NAMEPLATE	1- 7
SERVICE METER LOCATION	1- 7
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR	1- 8
SAFETY	2- 1
SAFETY	2- 2
SAFETY LABELS	2- 4
LOCATION OF SAFETY LABELS	2- 4
SAFETY LABELS	2- 5
GENERAL PRECAUTIONS	2- 10
SAFETY MACHINE OPERATION	2- 19
STARTING ENGINE	2- 19
OPERATION	2- 22
TRANSPORTATION	2- 28
BATTERY	2- 29
TOWING	2- 31
LIFTING OBJECTS WITH BUCKET	2- 32
SAFETY MAINTENANCE INFORMATION	2- 33
OPERATION	3- 1
MACHINE VIEW ILLUSTRATIONS	3- 2
OVERALL MACHINE VIEW	3- 2
CONTROLS AND GAUGES	3- 3
DETAILED CONTROLS AND GAUGES	3- 4
MONITORING SYSTEM	3- 4
SWITCHES	3- 10
CONTROL LEVERS AND PEDALS	3- 14
WINDSHIELD	3- 20
SLIDING DOOR	3- 24
SLIDING WINDOW	3- 24
EMERGENCY ESCAPE HAMMER	3- 25
COVER WITH LOCK	3- 26
ENGINE REAR COVER	3- 27
COOLING COVER	3- 27
MUD COVER	3- 28
METHOD OF OPENING (TILTING) FLOOR	3- 29
AUXILIARY ELECTRIC POWER	3- 35
FUSE	3- 35
BLOCK FUSE	3- 36
OPERATION MANUAL STORAGE	3- 37
TOOL BOX	3- 37
ASHTRAY	3- 37
HANDLING MACHINES EQUIPPED WITH KOMTRAX	3- 38

MACHINE OPERATIONS AND CONTROLS -----	3- 39
BEFORE STARTING ENGINE -----	3- 39
STARTING ENGINE -----	3- 57
AFTER STARTING ENGINE -----	3- 61
STOPPING THE ENGINE -----	3- 64
MACHINE OPERATION -----	3- 65
STEERING THE MACHINE -----	3- 70
SWINGING -----	3- 72
WORK EQUIPMENT CONTROLS AND OPERATIONS -----	3- 73
PROHIBITED OPERATIONS -----	3- 75
GENERAL OPERATION INFORMATION -----	3- 77
TRAVELING ON SLOPES -----	3- 79
ESCAPE FROM MUD -----	3- 81
WORK POSSIBLE USING COMPACT HYDRAULIC EXCAVATOR -----	3- 82
BUCKET REPLACEMENT -----	3- 84
PARKING MACHINE -----	3- 85
MACHINE INSPECTION AFTER DAILY WORK -----	3- 86
LOCKING -----	3- 87
RUBBER SHOES (MACHINE WITH RUBBER SHOES ONLY) -----	3- 88
TRANSPORTATION -----	3- 93
TRANSPORTATION PROCEDURE -----	3- 93
LOADING AND UNLOADING WITH TRAILER -----	3- 94
LIFTING MACHINE -----	3-100
COLD WEATHER OPERATION -----	3-103
COLD WEATHER OPERATION INFORMATION -----	3-103
CAB HEATER IN COLD WEATHER -----	3-104
AFTER DAILY WORK COMPLETION -----	3-105
AFTER COLD WEATHER SEASON -----	3-105
LONG TERM STORAGE -----	3-106
BEFORE STORAGE -----	3-106
DURING STORAGE -----	3-106
AFTER STORAGE -----	3-106
TROUBLES AND ACTIONS -----	3-108
RUNNING OUT OF FUEL -----	3-108
PHENOMENA THAT ARE NOT FAILURES -----	3-108
TOWING THE MACHINE -----	3-109
SEVERE JOB CONDITION -----	3-109
DISCHARGED BATTERY -----	3-110
OTHER TROUBLE -----	3-114
MAINTENANCE -----	4- 1
MAINTENANCE INFORMATION -----	4- 2
OUTLINE OF SERVICE -----	4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC -----	4- 4
ELECTRIC SYSTEM MAINTENANCE -----	4- 8
HANDLING HYDRAULIC SYSTEM -----	4- 8
WEAR PARTS -----	4- 9
WEAR PARTS LIST -----	4- 9
RECOMMENDED FUEL, COOLANT, AND LUBRICANT -----	4- 10
TIGHTENING TORQUE SPECIFICATIONS -----	4- 13
TIGHTENING TORQUE LIST -----	4- 13