

Operation & Maintenance Manual

TEN00070-00

PC58UU-3

HYDRAULIC EXCAVATOR

SERIAL NUMBERS 22301 and up

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU

CONTENTS

FOREWORD	1- 1
FOREWORD	1- 2
SAFETY INFORMATION	1- 5
INTRODUCTION	1- 7
DIRECTIONS OF MACHINE	1- 7
BREAKING-IN THE NEW MACHINE	1- 7
PRODUCT INFORMATION	1- 8
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE	1- 8
ENGINE SERIAL NUMBER PLATE AND ITS LOCATION	1- 8
EPA NAMEPLATE	1- 9
SERVICE METER LOCATION	1- 9
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR	1- 10
SAFETY	2- 1
SAFETY INFORMATION	2- 2
SAFETY LABELS	2- 4
LOCATION OF SAFETY LABELS	2- 5
SAFETY LABELS	2- 6
SAFETY INFORMATION	2- 14
SAFETY MACHINE OPERATION	2- 22
STARTING ENGINE	2- 22
OPERATION	2- 24
TRANSPORTATION	2- 30
BATTERY	2- 31
TOWING	2- 33
LIFTING OBJECTS WITH BUCKET	2- 34
SAFETY MAINTENANCE INFORMATION	2- 35
OPERATION	3- 1
MACHINE VIEW ILLUSTRATIONS	3- 2
OVERALL MACHINE VIEW	3- 2
CONTROLS AND GAUGES	3- 3
DETAILED CONTROLS AND GAUGES	3- 4
MONITORING SYSTEM	3- 4
SWITCHES	3- 12
CONTROL LEVERS AND PEDALS	3- 15
WINDSHIELD	3- 21
SLIDING DOOR	3- 25
REAR WINDOW	3- 26
SIDE WINDOW	3- 27
EMERGENCY ESCAPE HAMMER	3- 27
CAP WITH LOCK	3- 28
ENGINE HOOD	3- 29
MUD COVER	3- 30
FUSE	3- 31
BLOCK FUSE	3- 31
AUXILIARY ELECTRIC POWER	3- 32
OPERATION MANUAL STORAGE	3- 32
TOOL BOX	3- 33
GREASE PUMP HOLDER	3- 33
ASHTRAY	3- 34

MACHINE OPERATIONS AND CONTROLS -----	3- 35
BEFORE STARTING ENGINE -----	3- 35
STARTING ENGINE -----	3- 49
AFTER STARTING ENGINE -----	3- 54
STOPPING THE ENGINE -----	3- 58
MACHINE OPERATION -----	3- 59
STEERING THE MACHINE -----	3- 63
SWINGING -----	3- 65
WORK EQUIPMENT CONTROLS AND OPERATIONS -----	3- 66
PROHIBITED OPERATIONS -----	3- 68
GENERAL OPERATION INFORMATION -----	3- 70
TRAVELING ON SLOPES -----	3- 73
ESCAPE FROM MUD -----	3- 75
RECOMMENDED APPLICATIONS -----	3- 76
BUCKET REPLACEMENT -----	3- 78
PARKING MACHINE -----	3- 79
MACHINE INSPECTION AFTER DAILY WORK -----	3- 81
LOCKING -----	3- 81
ELECTRONIC CONTROL SYSTEM HANDLING -----	3- 82
ROAD LINERS AND RUBBER SHOES -----	3- 91
TRANSPORTATION -----	3- 96
TRANSPORTATION PROCEDURE -----	3- 96
LOADING AND UNLOADING WITH TRAILER -----	3- 96
LIFTING MACHINE -----	3-100
COLD WEATHER OPERATION -----	3-102
COLD WEATHER OPERATION INFORMATION -----	3-102
CAB HEATER IN COLD WEATHER -----	3-103
AFTER DAILY WORK COMPLETION -----	3-104
AFTER COLD WEATHER SEASON -----	3-104
LONG TERM STORAGE -----	3-105
BEFORE STORAGE -----	3-105
DURING STORAGE -----	3-105
AFTER STORAGE -----	3-105
TROUBLES AND ACTIONS -----	3-107
RUNNING OUT OF FUEL -----	3-107
PHENOMENA THAT ARE NOT FAILURES -----	3-107
TOWING THE MACHINE -----	3-110
SEVERE JOB CONDITION -----	3-110
DISCHARGED BATTERY -----	3-111
OTHER TROUBLE -----	3-114
MAINTENANCE -----	4- 1
MAINTENANCE INFORMATION -----	4- 2
OUTLINE OF SERVICE -----	4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC -----	4- 4
ELECTRIC SYSTEM MAINTENANCE -----	4- 6
WEAR PARTS -----	4- 7
WEAR PARTS LIST -----	4- 7
LUBRICANTS, FUEL AND COOLANT SPECIFICATIONS -----	4- 8
PROPER SELECTION -----	4- 8
TIGHTENING TORQUE SPECIFICATIONS -----	4- 12