

Operation & Maintenance Manual

SEAM022108T

PC600-6 PC600LC-6

HYDRAULIC EXCAVATOR

SERIAL NUMBERS PC600-11001
PC600LC-11001 and up

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU

CONTENTS

FOREWORD	1- 1
FOREWORD	1- 2
SAFETY INFORMATION	1- 5
INTRODUCTION	1- 7
DIRECTIONS OF MACHINE	1- 7
BREAKING-IN THE NEW MACHINE	1- 7
PRODUCT INFORMATION	1- 8
MACHINE SERIAL NUMBER PLATE AND ITS LOCATION	1- 8
ENGINE SERIAL NUMBER PLATE AND ITS LOCATION	1- 8
SERVICE METER LOCATION	1- 9
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR	1- 9
SAFETY	2- 1
SAFETY INFORMATION	2- 2
SAFETY LABELS	2- 4
LOCATION OF SAFETY LABELS	2- 5
SAFETY LABELS	2- 6
SAFETY INFORMATION	2- 11
SAFETY MACHINE OPERATION	2- 19
STARTING ENGINE	2- 19
OPERATION	2- 21
TRANSPORTATION	2- 27
BATTERY	2- 28
TOWING	2- 30
LIFTING OBJECTS WITH BUCKET	2- 31
SAFETY MAINTENANCE INFORMATION	2- 32
OPERATION	3- 1
MACHINE VIEW ILLUSTRATIONS	3- 2
OVERALL MACHINE VIEW	3- 2
CONTROLS AND GAUGES	3- 3
DETAILED CONTROLS AND GAUGES	3- 4
MONITORING SYSTEM	3- 4
SWITCHES	3- 18
CONTROL LEVERS AND PEDALS	3- 24
SUN ROOF	3- 27
WINDSHIELD	3- 28
EMERGENCY EXIT FROM OPERATOR'S CAB	3- 31
DOOR LOCK	3- 31
CAP WITH LOCK	3- 32
HOT AND COOL BOX	3- 33
LUGGAGE BOX	3- 33
ASHTRAY	3- 34
AIR CONDITIONER CONTROLS	3- 35
RADIO	3- 41
AUXILIARY ELECTRIC POWER	3- 46
FUSE	3- 46
CIRCUIT BREAKER	3- 47
CONTROLLERS	3- 48
TOOL BOX	3- 48
GREASE PUMP	3- 49

ACCUMULATOR	3- 52
MACHINE OPERATIONS AND CONTROLS	3- 53
BEFORE STARTING ENGINE	3- 53
STARTING ENGINE	3- 67
AFTER STARTING ENGINE	3- 71
STOPPING THE ENGINE	3- 77
MACHINE OPERATION	3- 78
STEERING THE MACHINE	3- 82
SWINGING	3- 84
WORK EQUIPMENT CONTROLS AND OPERATIONS	3- 85
WORKING MODE	3- 86
PROHIBITED OPERATIONS	3- 87
GENERAL OPERATION INFORMATION	3- 89
TRAVELING ON SLOPES	3- 90
ESCAPE FROM MUD	3- 92
RECOMMENDED APPLICATIONS	3- 93
BUCKET REPLACEMENT	3- 94
PARKING MACHINE	3- 96
CHECK AFTER SHUT OFF ENGINE	3- 97
MACHINE INSPECTION AFTER DAILY WORK	3- 97
LOCKING	3- 98
TRANSPORTATION	3- 99
PRECAUTIONS FOR TRANSPORTATION	3- 99
LIFTING MACHINE	3- 99
SHIPPING MACHINE INFORMATION	3-100
TRANSPORTATION POSTURE	3-101
PROCEDURE FOR INCREASING OR REDUCING TRACK FRAME GAUGE	3-106
COLD WEATHER OPERATION	3-108
COLD WEATHER OPERATION INFORMATION	3-108
AFTER DAILY WORK COMPLETION	3-110
AFTER COLD WEATHER SEASON	3-110
LONG TERM STORAGE	3-111
BEFORE STORAGE	3-111
DURING STORAGE	3-111
AFTER STORAGE	3-111
STARTING MACHINE AFTER LONG-TERM STORAGE	3-112
TROUBLES AND ACTIONS	3-113
RUNNING OUT OF FUEL	3-113
PHENOMENA THAT ARE NOT FAILURES	3-115
TOWING THE MACHINE	3-116
SEVERE JOB CONDITION	3-116
DISCHARGED BATTERY	3-117
OTHER TROUBLE	3-121
MAINTENANCE	4- 1
MAINTENANCE INFORMATION	4- 2
LUBRICANTS, COOLANT AND FILTERS	4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC	4- 4
ELECTRIC SYSTEM MAINTENANCE	4- 6
WEAR PARTS	4- 7
WEAR PARTS LIST	4- 7