

Operation & Maintenance Manual

UEAM005000

PC600-8 PC600LC-8

HYDRAULIC EXCAVATOR

SERIAL NUMBER

PC600-8 - K50001 and up

PC600LC-8 - K50001 and up



WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept inside the cab for reference and periodically reviewed by all personnel who will come into contact with the machine.

KOMATSU

CONTENTS

FOREWORD

FOREWORD	1-2
SAFETY INFORMATION	1-3
SIGNAL WORDS	1-3
EXAMPLE OF SAFETY MESSAGE USING SIGNAL WORD	1-3
OTHER SIGNAL WORDS	1-3
EXAMPLE OF SAFETY LABEL USING WORDS	1-4
SAFETY LABELS USING PICTOGRAM	1-4
NOISE	1-5
Vibration levels	1-6
GUIDE TO REDUCE VIBRATION LEVELS ON MACHINE	1-6
INTRODUCTION	1-8
DIRECTIONS OF MACHINE	1-8
VISIBILITY FROM OPERATOR'S SEAT	1-9
PROXIMITY VISIBILITY	1-9
12M CIRCUMFERENCE VISIBILITY	1-9
BREAKING-IN THE NEW MACHINE	1-10
PRODUCT INFORMATION	1-11
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE	1-11
ENGINE SERIAL NUMBER PLATE AND ITS LOCATION	1-11
SERVICE METER LOCATION	1-12
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR	1-12
MACHINE SERIAL PLATE	1-13

SAFETY

SAFETY INFORMATION	2-2
SAFETY LABELS	2-4
LOCATION OF SAFETY LABELS	2-5
SAFETY LABELS	2-6
SAFETY INFORMATION	2-13
SAFETY MACHINE OPERATION	2-22
STARTING ENGINE	2-22
OPERATION	2-24
TRANSPORTATION	2-30
BATTERY	2-31
TOWING	2-32
LIFTING OBJECTS WITH BUCKET	2-33

SAFETY MAINTENANCE INFORMATION	2-34
---	------

OPERATION

MACHINE VIEW ILLUSTRATIONS	3-2
OVERALL MACHINE VIEW.....	3-2
CONTROLS AND GAUGES.....	3-3
DETAILED CONTROLS AND GAUGES	3-5
MONITORING SYSTEM.....	3-5
BASIC OPERATION OF MACHINE MONITOR	3-6
EMERGENCY MONITORS	3-9
CAUTION MONITORS	3-11
BASIC CHECK MONITORS.....	3-13
METER DISPLAY PORTION.....	3-15
MONITOR SWITCHES PORTION	3-20
SWITCHES.....	3-34
CONTROL LEVERS AND PEDALS	3-41
SUN ROOF	3-44
OPENING	3-44
CLOSING.....	3-44
WINDSHIELD	3-45
EMERGENCY EXIT FROM OPERATOR'S CAB	3-50
DOOR LOCK	3-50
CAP WITH LOCK.....	3-51
HOT AND COOL BOX.....	3-52
MAGAZINE BOX.....	3-52
ASHTRAY	3-52
AIR CONDITIONER CONTROLS.....	3-53
AIR CONDITIONER CONTROL PANEL	3-53
METHOD OF OPERATION.....	3-57
USE AIR CONDITIONER WITH CARE	3-63
INSPECTION AND MAINTENANCE OF AIR CONDITIONER EQUIPPED MACHINE.....	3-63
OTHER FUNCTIONS	3-64
CAB RADIO	3-65
USE RADIO WITH CARE.....	3-65
AUXILIARY ELECTRIC POWER.....	3-66
24V POWER SOURCE	3-66
12V POWER SOURCE	3-66
FUSE	3-67
CIRCUIT BREAKER	3-68
CONTROLLER	3-69
TOOL BOX.....	3-69
GREASE PUMP.....	3-70
METHOD OF USE.....	3-70
PRECAUTIONS WHEN USING	3-71
SUPPLYING GREASE	3-71