

Operation & Maintenance Manual

SEAM02010502

PC60,60L,60U-5

HYDRAULIC EXCAVATOR

PC60 -20501

SERIAL NUMBERS PC60L- 7501 and up

PC60U- 4501

KOMATSU

CONTENTS

OPERATION		MAINTENANCE	
GENERAL LOCATIONS AND SPECIFICATIONS	4	PERIODIC MAINTENANCE	53
INSTRUMENTS AND CONTROLS	5	MAINTENANCE TABLE	54
CHECK BEFORE STARTING	26	OIL FILLER AND LEVEL GAUGE POSITIONS ...	57
OPERATING YOUR MACHINE	31	EVERY 50 HOURS SERVICE	58
ADJUSTMENT OF THE		EVERY 100 HOURS SERVICE	59
WORK EQUIPMENT (PC60U)	45	INITIAL 250 HOURS SERVICE	64
INVERSION AND REPLACEMENT OF BUCKET ...	47	EVERY 250 HOURS SERVICE	64
COLD WEATHER OPERATION	48	EVERY 500 HOURS SERVICE	67
		EVERY 1000 HOURS SERVICE	71
		EVERY 2000 HOURS SERVICE	73
		WHEN REQUIRED	77
		ADJUSTMENT	89
		TROUBLE SHOOTING GUIDE	91
		SERVICE METER	94
		MACHINE AND ENGINE SERIAL NUMBERS	95
		FUEL, COOLANT AND LUBRICANTS	96