

# Operation & Maintenance Manual

SEAM02010604

---

---

**PC60-6**

**PC60L-6**

**PC90-1**

**HYDRAULIC EXCAVATOR**

PC60 -34101

SERIAL NUMBERS PC60L- 8076 and up

PC90 - 1404

**KOMATSU**

# CONTENTS

## OPERATION

GENERAL LOCATIONS AND SPECIFICATIONS .....	4
INSTRUMENTS AND CONTROLS .....	6
HANDLING POWER MODE SWITCH .....	40
CHECK BEFORE STARTING .....	44
OPERATING YOUR MACHINE .....	50
CHANGING SWING RADIUS (For PC60, PC60L) .....	76
INVERSION AND REPLACEMENT OF BUCKET .....	78
SELECTION OF TRACK SHOES .....	80
INSTALLATION OF OPTIONAL ELECTRICAL EQUIPMENT .....	82
COLD WEATHER OPERATION .....	86

## MAINTENANCE

PERIODIC MAINTENANCE .....	95
BLEEDING AIR FROM CIRCUIT .....	96
PERIODICAL REPLACEMENT OF SAFETY PARTS .....	100
MAINTENANCE TABLE .....	104
OIL FILLER AND LEVEL GAUGE POSITIONS .....	108
EVERY 50 HOURS SERVICE .....	110
EVERY 100 HOURS SERVICE .....	110
EVERY 250 HOURS SERVICE .....	116
EVERY 500 HOURS SERVICE .....	120
EVERY 1000 HOURS SERVICE .....	126
EVERY 2000 HOURS SERVICE .....	128
WHEN REQUIRED .....	132
ADJUSTMENT .....	152
TROUBLE SHOOTING GUIDE .....	154
SERVICE METER .....	162
MACHINE AND ENGINE SERIAL NUMBERS .....	164
FUEL, COOLANT AND LUBRICANTS .....	166
MACHINES READY FOR ATTACHMENTS .....	169