

# Operation & Maintenance Manual

---

---

SEAM02010502

# PC60,60L,60U-5

HYDRAULIC EXCAVATOR

PC60 -20501

SERIAL NUMBERS PC60L- 7501 and up

PC60U- 4501

**KOMATSU**

# CONTENTS

<b>OPERATION</b>		<b>MAINTENANCE</b>	
GENERAL LOCATIONS AND SPECIFICATIONS .....	4	PERIODIC MAINTENANCE .....	53
INSTRUMENTS AND CONTROLS .....	5	MAINTENANCE TABLE .....	54
CHECK BEFORE STARTING .....	26	OIL FILLER AND LEVEL GAUGE POSITIONS ...	57
OPERATING YOUR MACHINE .....	31	EVERY 50 HOURS SERVICE .....	58
ADJUSTMENT OF THE		EVERY 100 HOURS SERVICE .....	59
WORK EQUIPMENT (PC60U) .....	45	INITIAL 250 HOURS SERVICE .....	64
INVERSION AND REPLACEMENT OF BUCKET ...	47	EVERY 250 HOURS SERVICE .....	64
COLD WEATHER OPERATION .....	48	EVERY 500 HOURS SERVICE .....	67
		EVERY 1000 HOURS SERVICE .....	71
		EVERY 2000 HOURS SERVICE .....	73
		WHEN REQUIRED .....	77
		ADJUSTMENT .....	89
		TROUBLE SHOOTING GUIDE .....	91
		SERVICE METER .....	94
		MACHINE AND ENGINE SERIAL NUMBERS .....	95
		FUEL, COOLANT AND LUBRICANTS .....	96