

Operation & Maintenance Manual

KOMATSU

PC650, PC650LC-3 PC650SE-3

HYDRAULIC EXCAVATOR


SERIAL NUMBERS

PC650 -10661

PC650LC -10661 and up

PC650SE -10661

CONTENTS

OPERATION		MAINTENANCE	
SAFETY HINTS . . . 	4	PERIODIC MAINTENANCE	93
GENERAL LOCATIONS AND SPECIFICATIONS	13	PRECAUTIONS FOR MAINTENANCE	94
INSTRUMENTS AND CONTROLS	14	PRECAUTIONS WHEN DISASSEMBLING MACHINE	99
OPERATING THE AIR CONDITIONER	48	BLEEDING AIR FROM CIRCUIT	101
USING ACCUMULATORS	54	MAINTENANCE TABLE	105
USING GREASE GUN	55	OIL FILLER AND LEVEL GAUGE POSITIONS	109
CHECK BEFORE STARTING	57	INITIAL 100 HOURS SERVICE	110
OPERATING YOUR MACHINE	65	EVERY 100 HOURS SERVICE	111
HANDLING OF BATTERY	80	INITIAL 250 HOURS SERVICE	113
TRANSPORTATION	83	EVERY 250 HOURS SERVICE	113
COLD WEATHER OPERATION	87	EVERY 500 HOURS SERVICE	121
		EVERY 1000 HOURS SERVICE	125
		EVERY 2000 HOURS SERVICE	128
		EVERY 4000 HOURS SERVICE	133
		WHEN REQUIRED	134
		ADJUSTMENT	146
		TROUBLE SHOOTING GUIDE	148
		STORAGE	152
		SERVICE METER	154
		MACHINE AND ENGINE SERIAL NUMBERS	155
		FUEL, COOLANT AND LUBRICANTS	156
		LOADING SHOVEL	161