

Operation & Maintenance Manual

HYDRAULIC
EXCAVATOR

PC78US-10

SERIAL NUMBERS 30001 and up

⚠ WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU

TABLE OF CONTENTS

FOREWORD.....	1-1
READ THIS MANUAL.....	1-2
SAFETY INFORMATION.....	1-3
INTRODUCTION.....	1-4
MAIN USE OF MACHINE.....	1-4
DIRECTIONS OF MACHINE.....	1-4
VISIBILITY FROM OPERATOR'S SEAT.....	1-5
PRODUCT INFORMATION.....	1-6
LOCATION OF PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE.....	1-6
LOCATION OF ENGINE NUMBER PLATE.....	1-6
SERVICE METER LOCATION.....	1-7
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR.....	1-7
SAFETY.....	2-1
SAFETY LABELS.....	2-2
LOCATION OF SAFETY LABELS.....	2-3
CONTENTS OF SAFETY LABELS.....	2-5
GENERAL PRECAUTIONS COMMON TO OPERATION AND MAINTENANCE.....	2-13
PRECAUTIONS BEFORE STARTING OPERATION.....	2-13
PREPARATIONS FOR SAFE OPERATION.....	2-13
PRECAUTIONS TO PREVENT FIRE.....	2-15
PRECAUTIONS WHEN GETTING ON OR OFF MACHINE.....	2-17
DO NOT GET CAUGHT IN WORK EQUIPMENT.....	2-18
PRECAUTIONS RELATED TO PROTECTIVE STRUCTURES.....	2-19
PROTECTION AGAINST FALLING, FLYING OR INTRUDING OBJECTS.....	2-19
UNAUTHORIZED MODIFICATION.....	2-20
PRECAUTIONS RELATED TO ATTACHMENTS AND OPTIONS.....	2-20
PRECAUTIONS RELATED TO CAB GLASS.....	2-20
PRECAUTIONS WHEN RUNNING ENGINE INSIDE BUILDING.....	2-20
PRECAUTIONS FOR OPERATION.....	2-21
PRECAUTIONS FOR JOBSITE.....	2-21
START ENGINE.....	2-23
PRECAUTIONS FOR OPERATION.....	2-25
PRECAUTIONS FOR TRANSPORTATION.....	2-33
TOWING AND BEING TOWED.....	2-34
LIFTING OPERATION BY USING BUCKET WITH HOOK.....	2-35
PRECAUTIONS FOR MAINTENANCE.....	2-36
PRECAUTIONS BEFORE STARTING INSPECTION AND MAINTENANCE.....	2-36
PRECAUTIONS FOR CHECK AND MAINTENANCE.....	2-39
OPERATION.....	3-1
GENERAL VIEW.....	3-2
MACHINE EQUIPMENT NAME.....	3-2
CAB EQUIPMENT NAMES.....	3-4
CONTROLS AND GAUGES NAMES.....	3-5
EXPLANATION OF COMPONENTS.....	3-8
EXPLANATION OF MACHINE MONITOR EQUIPMENT.....	3-8
SWITCHES.....	3-81
CONTROL LEVERS AND PEDALS.....	3-87
OTHER EQUIPMENT.....	3-92
MACHINE OPERATIONS AND CONTROLS.....	3-112
CHECKS AND ADJUSTMENT BEFORE STARTING ENGINE.....	3-112
METHOD FOR STARTING ENGINE.....	3-134
METHOD FOR OPERATIONS AND CHECKS AFTER STARTING ENGINE.....	3-139
METHOD FOR STOPPING ENGINE.....	3-150
METHOD FOR STARTING MACHINE (TRAVEL FORWARD AND REVERSE) AND STOPPING MACHINE.....	3-151
METHOD FOR STEERING MACHINE.....	3-155