

# Operation & Maintenance Manual

# PC78US-5

## HYDRAULIC EXCAVATOR

**SERIAL NUMBERS PC78US-5 –1001 and up**

This material is proprietary to Komatsu Utility Division and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America International Company.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2001 Komatsu  
DataKom Publishing Corporation

# CONTENTS

## FOREWORD

<b>FOREWORD</b> .....	1-2
<b>SAFETY INFORMATION</b> .....	1-5
<b>INTRODUCTION</b> .....	1-7
DIRECTIONS OF MACHINE .....	1-7
<b>PRODUCT INFORMATION</b> .....	1-8
MACHINE SERIAL NUMBER PLATE AND ITS LOCATION .....	1-8
ENGINE SERIAL NUMBER PLATE AND ITS LOCATION .....	1-8
SERVICE METER LOCATION .....	1-9
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR .....	1-9

## SAFETY

<b>SAFETY INFORMATION</b> .....	2-2
<b>POSITION FOR ATTACHING SAFETY LABELS</b> .....	2-4
POSITION FOR ATTACHING SAFETY LABELS .....	2-5
SAFETY LABELS .....	2-6
<b>SAFETY INFORMATION</b> .....	2-10
<b>SAFETY MACHINE OPERATION</b> .....	2-19
STARTING ENGINE .....	2-19
OPERATION .....	2-21
TRANSPORTATION .....	2-27
BATTERY .....	2-29
TOWING .....	2-31
LIFTING OBJECTS WITH BUCKET .....	2-32
<b>SAFETY MAINTENANCE INFORMATION</b> .....	2-33

## OPERATION

<b>GENERAL VIEW</b> .....	3-2
GENERAL VIEW OF MACHINE .....	3-2
GENERAL VIEW CONTROLS AND GAUGES .....	3-3
<b>EXPLANATION OF COMPONENTS</b> .....	3-4
MACHINE MONITOR .....	3-4
SWITCHES .....	3-10

CONTROL LEVERS, PEDALS .....	3-15
CEILING WINDOW .....	3-18
FRONT WINDOW .....	3-19
SLIDING DOOR .....	3-22
REAR WINDOW .....	3-23
HAMMER FOR EMERGENCY ESCAPE .....	3-23
CAP, COVER WITH LOCK .....	3-24
ENGINE HOOD .....	3-25
RIGHT SIDE INSPECTION COVER .....	3-26
FUEL TANK FILLER COVER .....	3-27
FUSE .....	3-28
FUSIBLELINK .....	3-28
HANDLING AIR CONDITIONER .....	3-29
CAR RADIO .....	3-32
OPERATION AND MAINTENANCE MANUAL HOLDER .....	3-37
TOOL COMPARTMENT .....	3-37
GREASE GUN HOLDER .....	3-37
ASHTRAY .....	3-37
<b>MACHINE OPERATIONS AND CONTROLS .....</b>	<b>3-38</b>
BEFORE STARTING ENGINE .....	3-38
STARTING ENGINE .....	3-51
AFTER STARTING ENGINE .....	3-54
STOPPING THE ENGINE .....	3-57
CHECK AFTER SHUT OFF ENGINE .....	3-57
MACHINE OPERATION .....	3-58
STEERING THE MACHINE .....	3-62
SWINGING .....	3-64
WORK EQUIPMENT CONTROLS AND OPERATIONS .....	3-65
PROHIBITED OPERATIONS .....	3-67
GENERAL OPERATION INFORMATION .....	3-71
TRAVELING ON SLOPES .....	3-72
ESCAPE FROM MUD .....	3-74
RECOMMENDED APPLICATIONS .....	3-75
REPLACEMENT AND INVERSION OF BUCKET .....	3-77
PARKING MACHINE .....	3-81
CHECK AFTER FINISHING WORK .....	3-83
LOCKING .....	3-83
HANDLING RUBBER SHOE AND ROAD LINER .....	3-84
<b>TRANSPORTATION .....</b>	<b>3-89</b>
TRANSPORTATION PROCEDURE .....	3-89
LOADING AND UNLOADING WITH TRAILER .....	3-90
LIFTING MACHINE .....	3-96
<b>COLD WEATHER OPERATION .....</b>	<b>3-98</b>
COLD WEATHER OPERATION INFORMATION .....	3-98
AFTER DAILY WORK COMPLETION .....	3-100