

# SHOP MANUAL

## KOMATSU

# PC78UU-6 PC78US-6

MACHINE MODEL

SERIAL NUMBER

**PC78UU-6**

**22832 and up**

**PC78US-6**

**4001 and up**

**PC78US-6**

**4809 and up (For Norway & EU)**

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.
- PC78UU-6, PC78US-6 mounts the 4D95LE-2 and S4D95LE-3-A engine.  
For details of the engine, see the 95-2 Series and 95-3 Series Engine Shop Manual.
- For the PC78US-6 for Norway (Serial No. 4809 and up), the parts which different from the standard model have been put together and added as Section 50. For the common parts, see this manual.

# CONTENTS

	No. of page
<b>01 GENERAL</b> .....	01-1
<b>10 STRUCTURE, FUNCTION AND MAINTENANCE STANDARD</b> . . . .	10-1
<b>20 TESTING AND ADJUSTING</b> .....	20-1
<b>30 DISASSEMBLY AND ASSEMBLY</b> .....	30-1
<b>50 OTHER SPECIFICATIONS (PC78US-6 For Norway)</b> .....	50-1
<b>90 OTHERS</b> .....	90-1