

# Operation & Maintenance Manual

UEAM005400



# PC800-8

# PC800LC-8

## HYDRAULIC EXCAVATOR

### SERIAL NUMBER

PC800-8 - 50001 and up

PC800LC-8 - 50001 and up



#### WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept inside the cab for reference and periodically reviewed by all personnel who will come into contact with the machine.

# KOMATSU

# CONTENTS

## FOREWORD

<b>FOREWORD</b> .....	1-2
<b>SAFETY INFORMATION</b> .....	1-3
Noise emission levels .....	1-5
Vibration levels.....	1-6
GUIDE TO REDUCE VIBRATION LEVELS ON MACHINE .....	1-6
BREAKING-IN THE NEW MACHINE .....	1-8
<b>INTRODUCTION</b> .....	1-9
DIRECTIONS OF MACHINE .....	1-9
VISIBILITY FROM OPERATOR'S SEAT .....	1-10
PROXIMITY VISIBILITY .....	1-10
12M CIRCUMFERENCE VISIBILITY .....	1-10
<b>PRODUCT INFORMATION</b> .....	1-11
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE .....	1-11
EPA REGULATIONS, ENGINE NUMBER PLATE .....	1-11
SERVICE METER LOCATION .....	1-12
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR .....	1-12
MACHINE SERIAL PLATE .....	1-13

## SAFETY

<b>SAFETY INFORMATION</b> .....	2-2
<b>SAFETY LABELS</b> .....	2-4
LOCATION OF SAFETY LABELS .....	2-5
SAFETY LABELS .....	2-6
<b>SAFETY INFORMATION</b> .....	2-13
<b>SAFETY MACHINE OPERATION</b> .....	2-22
STARTING ENGINE .....	2-22
OPERATION.....	2-23
TRANSPORTATION.....	2-29
BATTERY .....	2-30
TOWING .....	2-31
LIFTING OBJECTS WITH BUCKET.....	2-32
<b>SAFETY MAINTENANCE INFORMATION</b> .....	2-33

## OPERATION

<b>MACHINE VIEW ILLUSTRATIONS</b> .....	3-2
OVERALL MACHINE VIEW.....	3-2
CONTROLS AND GAUGES.....	3-3
<b>DETAILED CONTROLS AND GAUGES</b> .....	3-5
MONITORING SYSTEM.....	3-5
BASIC OPERATION OF MACHINE MONITOR .....	3-6
EMERGENCY MONITORS .....	3-9
CAUTION MONITORS .....	3-11
BASIC CHECK MONITORS .....	3-13
METER DISPLAY PORTION.....	3-15
MONITOR SWITCHES PORTION .....	3-19
SWITCHES.....	3-34
CONTROL LEVERS AND PEDALS .....	3-41
SUN ROOF .....	3-43
OPENING .....	3-44
CLOSING.....	3-44
WINDSHIELD .....	3-44
EMERGENCY EXIT FROM OPERATOR'S CAB.....	3-49
DOOR LOCK .....	3-49
CAP WITH LOCK.....	3-49
HOT AND COOL BOX.....	3-51
MAGAZINE BOX.....	3-51
ASHTRAY .....	3-51
AIR CONDITIONER CONTROLS.....	3-52
AIR CONDITIONER CONTROL PANEL .....	3-52
METHOD OF OPERATION .....	3-56
USE AIR CONDITIONER WITH CARE .....	3-62
AIR CONDITIONER MAINTENANCE .....	3-63
OTHER FUNCTIONS .....	3-63
RADIO-CASSETTE (OPTION)-65	
USE RADIO WITH CARE .....	3-65
AUXILIARY ELECTRIC POWER.....	3-66
24V POWER SOURCE .....	3-66
12V POWER SOURCE .....	3-67
FUSE .....	3-68
CIRCUIT BREAKER .....	3-69
CONTROLLER .....	3-70
TOOL BOX.....	3-70
GREASE PUMP.....	3-71
METHOD OF USE.....	3-71
PRECAUTIONS WHEN USING .....	3-72
SUPPLYING GREASE .....	3-73
ACCUMULATOR HANDLING.....	q-75
RELEASING PRESSURE IN THE CONTROL CIRCUIT ON MACHINES EQUIPPED WITH AN ACCUMULATOR .....	Q-75