

Operation & Maintenance Manual

SEAM032605T

PC750,750LC-6 PC750SE-6 PC800,800SE-6 HYDRAULIC EXCAVATOR

PC750-11001
PC750LC-11001
SERIAL NUMBERS PC750SE-11001 and up
PC800-31001
PC800SE-31001

⚠ WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU

CONTENTS

FOREWORD -----	1- 1
FOREWORD -----	1- 2
SAFETY INFORMATION -----	1- 5
INTRODUCTION -----	1- 7
DIRECTIONS OF MACHINE -----	1- 7
BREAKING-IN THE NEW MACHINE -----	1- 7
PRODUCT INFORMATION -----	1- 8
MACHINE SERIAL NUMBER PLATE AND ITS LOCATION -----	1- 8
ENGINE SERIAL NUMBER PLATE AND ITS LOCATION -----	1- 8
SERVICE METER LOCATION -----	1- 9
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR -----	1- 9
SAFETY -----	2- 1
SAFETY INFORMATION -----	2- 2
SAFETY LABELS -----	2- 4
LOCATION OF SAFETY LABELS-----	2- 4
SAFETY LABELS -----	2- 5
SAFETY INFORMATION -----	2- 10
SAFETY MACHINE OPERATION -----	2- 18
STARTING ENGINE -----	2- 18
OPERATION -----	2- 20
TRANSPORTATION -----	2- 25
BATTERY -----	2- 26
TOWING -----	2- 28
LIFTING OBJECTS WITH BUCKET -----	2- 29
SAFETY MAINTENANCE INFORMATION -----	2- 30
OPERATION -----	3- 1
MACHINE VIEW ILLUSTRATIONS -----	3- 2
OVERALL MACHINE VIEW -----	3- 2
CONTROLS AND GAUGES -----	3- 3
DETAILED CONTROLS AND GAUGES -----	3- 4
MONITORING SYSTEM -----	3- 4
SWITCHES -----	3- 19
CONTROL LEVERS AND PEDALS -----	3- 25
SUN ROOF -----	3- 28
WINDSHIELD -----	3- 29
EMERGENCY EXIT FROM OPERATOR'S CAB -----	3- 32
DOOR LOCK -----	3- 32
CAP WITH LOCK -----	3- 32
HOT AND COOL BOX -----	3- 34
LUGGAGE BOX -----	3- 34
ASHTRAY -----	3- 34
AIR CONDITIONER CONTROLS -----	3- 35
RADIO -----	3- 41
AUXILIARY ELECTRIC POWER -----	3- 46
FUSE -----	3- 46
CIRCUIT BREAKER -----	3- 47
CONTROLLERS -----	3- 48
TOOL BOX -----	3- 48
GREASE PUMP -----	3- 49

ACCUMULATOR -----	3- 52
MACHINE OPERATIONS AND CONTROLS -----	3- 53
BEFORE STARTING ENGINE -----	3- 53
STARTING ENGINE -----	3- 70
AFTER STARTING ENGINE -----	3- 74
STOPPING THE ENGINE -----	3- 80
MACHINE OPERATION -----	3- 81
STEERING THE MACHINE -----	3- 85
SWINGING -----	3- 87
WORK EQUIPMENT CONTROLS AND OPERATIONS -----	3- 88
WORKING MODE -----	3- 89
PROHIBITED OPERATIONS -----	3- 90
GENERAL OPERATION INFORMATION -----	3- 92
TRAVELING ON SLOPES -----	3- 93
ESCAPE FROM MUD -----	3- 95
RECOMMENDED APPLICATIONS -----	3- 96
BUCKET REPLACEMENT -----	3- 97
PARKING MACHINE -----	3- 99
CHECK AFTER SHUT OFF ENGINE -----	3-101
MACHINE INSPECTION AFTER DAILY WORK -----	3-101
LOCKING -----	3-101
TRANSPORTATION -----	3-102
PRECAUTIONS FOR TRANSPORTATION -----	3-102
LIFTING MACHINE -----	3-103
SHIPPING MACHINE INFORMATION -----	3-104
TRANSPORTATION POSTURE -----	3-105
PROCEDURE FOR INCREASING OR REDUCING TRACK FRAME GAUGE -----	3-110
COLD WEATHER OPERATION -----	3-112
COLD WEATHER OPERATION INFORMATION -----	3-112
AFTER DAILY WORK COMPLETION -----	3-114
AFTER COLD WEATHER SEASON -----	3-114
LONG TERM STORAGE -----	3-115
BEFORE STORAGE -----	3-115
DURING STORAGE -----	3-115
AFTER STORAGE -----	3-115
STARTING MACHINE AFTER LONG-TERM STORAGE -----	3-116
TROUBLES AND ACTIONS -----	3-117
RUNNING OUT OF FUEL -----	3-117
PHENOMENA THAT ARE NOT FAILURES -----	3-119
TOWING THE MACHINE -----	3-120
SEVERE JOB CONDITION -----	3-120
DISCHARGED BATTERY -----	3-121
OTHER TROUBLE -----	3-125
MAINTENANCE -----	4- 1
MAINTENANCE INFORMATION -----	4- 2
LUBRICANTS, COOLANT AND FILTERS -----	4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC -----	4- 4
ELECTRIC SYSTEM MAINTENANCE -----	4- 6
WEAR PARTS -----	4- 7
WEAR PARTS LIST -----	4- 7