

# Operation & Maintenance Manual

HYDRAULIC  
EXCAVATOR

**PC800 -8 PC800LC -8**  
**PC800SE -8**  
**PC850 -8 PC850SE -8**

SERIAL NUMBERS

PC800-50001  
PC850-10001 and up

## ecot3

### WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

### NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

# KOMATSU

# CONTENTS

FOREWORD .....	1- 1
BEFORE READING THIS MANUAL .....	1- 2
SAFETY INFORMATION .....	1- 3
INTRODUCTION .....	1- 4
USE OF MACHINE .....	1- 4
DIRECTIONS OF MACHINE .....	1- 4
VISIBILITY FROM OPERATOR'S SEAT .....	1- 5
PRODUCT INFORMATION .....	1- 6
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE .....	1- 6
EPA REGULATIONS, ENGINE NUMBER PLATE .....	1- 6
SERVICE METER LOCATION .....	1- 7
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR .....	1- 7
SAFETY .....	2- 1
SAFETY .....	2- 2
SAFETY LABELS .....	2- 5
LOCATION OF SAFETY LABELS .....	2- 6
SAFETY LABELS .....	2- 7
GENERAL PRECAUTIONS COMMON TO OPERATION AND MAINTENANCE .....	2- 13
PRECAUTIONS BEFORE STARTING OPERATION .....	2- 13
PREPARATIONS FOR SAFE OPERATION .....	2- 13
FIRE PREVENTION .....	2- 15
PRECAUTIONS WHEN GETTING ON OR OFF MACHINE .....	2- 16
DO NOT GET CAUGHT IN WORK EQUIPMENT .....	2- 18
PRECAUTIONS RELATED TO PROTECTIVE STRUCTURES .....	2- 18
PROTECTION AGAINST FALLING, FLYING, INTRUDING OBJECTS .....	2- 18
UNAUTHORIZED MODIFICATION .....	2- 19
PRECAUTIONS RELATED TO ATTACHMENTS AND OPTIONS .....	2- 19
PRECAUTIONS RELATED TO CAB GLASS .....	2- 19
PRECAUTIONS WHEN RUNNING ENGINE INSIDE BUILDING .....	2- 19
PRECAUTIONS FOR OPERATION .....	2- 20
PRECAUTIONS FOR JOBSITE .....	2- 20
STARTING ENGINE .....	2- 22
OPERATION .....	2- 24
TRANSPORTATION .....	2- 31
TOWING .....	2- 32
LIFTING OBJECTS WITH BUCKET .....	2- 33
PRECAUTIONS FOR MAINTENANCE .....	2- 34
PRECAUTIONS BEFORE STARTING INSPECTION AND MAINTENANCE .....	2- 34
PRECAUTIONS FOR INSPECTION AND MAINTENANCE .....	2- 38
OPERATION .....	3- 1
MACHINE VIEW ILLUSTRATIONS .....	3- 2
OVERALL MACHINE VIEW .....	3- 2
CONTROLS AND GAUGES .....	3- 3
DETAILED CONTROLS AND GAUGES .....	3- 5
MONITORING SYSTEM .....	3- 5
SWITCHES .....	3- 34
CONTROL LEVERS AND PEDALS .....	3- 41
SUN ROOF .....	3- 44
WINDSHIELD .....	3- 44

EMERGENCY EXIT FROM OPERATOR'S CAB -----	3- 49
DOOR LOCK -----	3- 49
CAP WITH LOCK -----	3- 50
HOT AND COOL BOX -----	3- 52
MAGAZINE BOX -----	3- 52
ASHTRAY -----	3- 52
FIRE EXTINGUISHER -----	3- 53
AIR CONDITIONER CONTROLS -----	3- 54
RADIO -----	3- 68
AUXILIARY ELECTRIC POWER -----	3- 72
FUSE -----	3- 73
CIRCUIT BREAKER -----	3- 74
CONTROLLER -----	3- 75
TOOL BOX -----	3- 75
GREASE PUMP -----	3- 76
MACHINE OPERATIONS AND CONTROLS -----	3- 79
BEFORE STARTING ENGINE -----	3- 79
STARTING ENGINE -----	3- 98
AFTER STARTING ENGINE -----	3-101
STOPPING THE ENGINE -----	3-110
MACHINE OPERATION -----	3-111
STEERING THE MACHINE -----	3-115
SWINGING -----	3-117
WORK EQUIPMENT CONTROLS AND OPERATIONS -----	3-118
WORKING MODE -----	3-119
PROHIBITED OPERATIONS -----	3-121
GENERAL OPERATION INFORMATION -----	3-126
TRAVELING ON SLOPES -----	3-128
ESCAPE FROM MUD -----	3-130
RECOMMENDED APPLICATIONS -----	3-131
BUCKET REPLACEMENT -----	3-132
PARKING MACHINE -----	3-134
MACHINE INSPECTION AFTER DAILY WORK -----	3-135
LOCKING -----	3-136
TRANSPORTATION -----	3-137
TRANSPORTATION PROCEDURE -----	3-137
LIFTING MACHINE -----	3-138
SHIPPING MACHINE INFORMATION -----	3-139
TRANSPORTATION POSTURE -----	3-140
PROCEDURE FOR INCREASING OR REDUCING TRACK FRAME GAUGE -----	3-146
COLD WEATHER OPERATION -----	3-148
COLD WEATHER OPERATION INFORMATION -----	3-148
AFTER DAILY WORK COMPLETION -----	3-151
AFTER COLD WEATHER SEASON -----	3-151
LONG TERM STORAGE -----	3-152
BEFORE STORAGE -----	3-152
DURING STORAGE -----	3-152
AFTER STORAGE -----	3-153
STARTING MACHINE AFTER LONG-TERM STORAGE -----	3-153
TROUBLES AND ACTIONS -----	3-154