

Operation & Maintenance Manual

PC88MR-10

HYDRAULIC EXCAVATOR

SERIAL NUMBERS

PC88MR-10 **F10003** and up
 7001 and up



WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept inside the cab for reference and periodically reviewed by all personnel who will come into contact with the machine.

ORIGINAL INSTRUCTIONS

KOMATSU

SWITCHES	3-78
CONTROL LEVERS AND PEDALS	3-85
OTHER EQUIPMENT	3-90
MACHINE OPERATIONS AND CONTROLS	3-108
CHECKS AND ADJUSTMENT BEFORE STARTING ENGINE	3-108
METHOD FOR STARTING ENGINE	3-132
METHOD FOR OPERATIONS AND CHECKS AFTER STARTING ENGINE	3-136
METHOD FOR STOPPING ENGINE	3-146
METHOD FOR STARTING MACHINE (TRAVEL FORWARD AND REVERSE) AND STOPPING MACHINE	3-147
METHOD FOR STEERING MACHINE	3-150
METHOD FOR SWINGING MACHINE	3-152
METHOD FOR OPERATING WORK EQUIPMENT	3-152
HANDLE WORKING MODE	3-154
PROHIBITED OPERATIONS	3-156
PRECAUTIONS FOR OPERATION	3-161
PRECAUTIONS FOR WORKING ON SLOPE	3-163
METHOD FOR ESCAPING FROM MUD	3-165
RECOMMENDED APPLICATIONS	3-166
METHOD FOR LIFTING OBJECTS WITH LIFTING DEVICE	3-168
METHOD FOR REPLACING AND INVERTING BUCKET	3-170
METHOD FOR PARKING MACHINE	3-173
METHOD FOR CHECKING AFTER FINISHING WORK	3-175
LOCK	3-176
HANDLE AIR CONDITIONER	3-183
EXPLANATION OF AIR CONDITIONER EQUIPMENT	3-184
METHOD FOR OPERATING AIR CONDITIONER	3-188
HANDLE RADIO	3-195
STOW ANTENNA	3-195
HANDLE ROAD LINERS AND RUBBER SHOES	3-196
RECOMMENDED USE OF ROAD LINERS AND RUBBER SHOES	3-196
WARRANTY OF ROAD LINERS AND RUBBER SHOES	3-196
PRECAUTIONS WHEN USING ROAD LINERS AND RUBBER SHOES	3-196
TRANSPORTATION	3-200
PRECAUTIONS FOR TRANSPORTING MACHINE	3-200
SELECT TRANSPORTATION METHOD	3-200
LOADING AND UNLOADING WITH TRAILER	3-201
METHOD FOR LIFTING MACHINE	3-206
COLD WEATHER OPERATION	3-208
COLD WEATHER OPERATION INFORMATION	3-208
PRECAUTIONS AFTER DAILY WORK COMPLETION	3-209
AFTER COLD WEATHER SEASON	3-209
PRECAUTIONS FOR LONG-TERM STORAGE	3-210
PREPARATION FOR LONG-TERM STORAGE	3-210
MAINTENANCE DURING LONG-TERM STORAGE	3-210
STARTING MACHINE AFTER LONG-TERM STORAGE	3-210
TROUBLES AND ACTIONS	3-212
ACTIONS WHEN RUNNING OUT OF FUEL	3-212
PHENOMENA THAT ARE NOT FAILURES	3-212
PRECAUTIONS FOR TOWING MACHINE	3-213
PRECAUTIONS FOR SEVERE JOB CONDITION	3-214
PRECAUTIONS FOR DISCHARGED BATTERY	3-215
OTHER TROUBLE	3-220
MAINTENANCE	4-1
PRECAUTIONS FOR MAINTENANCE	4-2
CHECK SERVICE METER READING	4-2
KOMATSU GENUINE REPLACEMENT PARTS	4-2
KOMATSU GENUINE LUBRICANTS	4-2

ALWAYS USE CLEAN WASHER FLUID	4-2
FRESH AND CLEAN LUBRICANTS	4-2
CHECK DRAINED OIL AND USED FILTER.....	4-2
PRECAUTIONS FOR REFILLING OIL OR FUEL	4-2
WELDING INSTRUCTIONS.....	4-2
DO NOT DROP THINGS INSIDE MACHINE	4-2
DUSTY JOBSITES.....	4-2
AVOID MIXING OIL.....	4-3
LOCK INSPECTION COVERS	4-3
BLEED AIR FROM HYDRAULIC CIRCUIT	4-3
PRECAUTIONS WHEN INSTALLING HYDRAULIC HOSES	4-3
CHECKS AFTER INSPECTION AND MAINTENANCE.....	4-3
FUEL AND LUBRICANTS TO MATCH THE AMBIENT TEMPERATURE.....	4-3
CLOSE ENGINE HOOD SECURELY	4-3
OUTLINE OF MAINTENANCE.....	4-4
HANDLE OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC	4-4
HANDLE ELECTRICAL COMPONENTS	4-8
STANDARD TIGHTENING TORQUE FOR BOLTS AND NUTS	4-9
MAINTENANCE SCHEDULE.....	4-11
MAINTENANCE SCHEDULE TABLE.....	4-11
MAINTENANCE INTERVAL FOR HYDRAULIC BREAKER	4-13
MAINTENANCE PROCEDURE	4-14
WHEN REQUIRED	4-14
CHECKS BEFORE STARTING.....	4-45
EVERY 100 HOURS MAINTENANCE	4-46
EVERY 250 HOURS MAINTENANCE	4-48
EVERY 500 HOURS MAINTENANCE	4-53
EVERY 1000 HOURS MAINTENANCE	4-63
EVERY 2000 HOURS MAINTENANCE	4-70
EVERY 4000 HOURS MAINTENANCE	4-77
EVERY 5000 HOURS MAINTENANCE	4-80
SPECIFICATIONS	5-1
SPECIFICATIONS	5-2
EXPLANATION OF LIFT CAPACITY CHART.....	5-4
ATTACHMENTS AND OPTIONS	6-1
PRECAUTIONS FOR USING ATTACHMENT AND OPTIONS.....	6-2
PRECAUTIONS WHEN SELECTING	6-2
READ THE OPERATION AND MAINTENANCE MANUAL THOROUGHLY	6-2
PRECAUTIONS WHEN REMOVING AND INSTALLING	6-2
PRECAUTIONS WHEN USING	6-2
QUICK COUPLER SYSTEM.....	6-4
HANDLING QUICK COUPLER	6-4
2-PIECE BOOM.....	6-7
2-PIECE BOOM COMPONENTS.....	6-7
2-PIECE BOOM CONTROL PEDAL	6-7
METHOD FOR LUBRICATING 2-PIECE BOOM.....	6-8
SPECIFICATIONS	6-9
EXPLANATION OF LIFT CAPACITY CHART.....	6-11
HANDLE BUCKET WITH HOOK.....	6-13
PRECAUTIONS FOR OPERATION	6-13
HANDLE MACHINE READY FOR INSTALLATION OF ATTACHMENT	6-14
EXPLANATION OF COMPONENTS.....	6-14
HYDRAULIC CIRCUIT.....	6-16
METHOD FOR REMOVING AND INSTALLING ATTACHMENT	6-17
METHOD FOR OPERATING ATTACHMENT.....	6-22
LONG-TERM STORAGE	6-25
SPECIFICATIONS	6-25
ATTACHMENTS AND OPTIONS	6-26