

Operation & Maintenance Manual

PC95-1

HYDRAULIC EXCAVATOR

SERIAL NUMBERS **PC95-1 -5000007** and up

This material is proprietary to Komatsu Dresser Company and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu Dresser Company.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or add improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, periodic revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

CONTENTS

	Page
FOREWORD	0-1
SAFETY INFORMATION	0-2
INTRODUCTION	0-4
PERMITTED USES	0-4
MAIN FEATURES	0-4
RUNNING IN THE MACHINE	0-4
LOCATION OF MACHINE COMPONENT IDENTIFICATION PLATES	0-6
SERIAL NUMBERS AND ADDRESS OF DEALER	0-7
 SAFETY AND ACCIDENT PREVENTION	
1. SAFETY MEASURES	2
1.1 • General precautions	2
1.2 • Safety devices	2
1.3 • Personal protective clothing and equipment	2
1.4 • Unauthorised modifications	3
1.5 • Leaving the driving seat	3
1.6 • Entering and leaving the machine	4
1.7 • Prevention of fuel and oil fires	4
1.8 • Prevention of burns and scalding	5
1.9 • Prevention of asbestos dust contamination	6
1.10 • Prevention of injury by work equipment	6
1.11 • Fire extinguishers and first aid kit	7
1.12 • Precautions regarding the cab frame	7
1.13 • Precautions regarding equipment	7
 PRECAUTIONS	
2. PRECAUTIONS TO BE TAKEN BEFORE STARTING THE ENGINE	10
2.1 • On-site safety	10
2.2 • Fire prevention	10
2.3 • Precautions regarding the cab	11
2.4 • Ventilation of enclosed areas	11
2.5 • Cleaning windows, mirrors and headlights - checking wiper blades, lamps	11
3. PRECAUTIONS TO BE TAKEN WHILE WORKING	12
3.1 • Starting the engine	12
3.2 • Checks prior to reversing	12
3.3 • Moving the machine	13
3.4 • Working on slopes	14
3.5 • Prevention of electrocution	15
3.6 • Visibility	16
3.7 • Working on frozen or snow-covered ground	16
3.8 • Prevention of damage by the equipment	16

	Page
3.9	• Working on loose or ploughed soil 16
3.10	• Parking the machine 17
4.	TRANSPORTING THE MACHINE ON ANOTHER VEHICLE 18
4.1	• Loading and unloading 18
4.2	• The route 18
5.	THE BATTERY 19
5.1	• Safety precautions for work on batteries 19
5.2	• Starting the engine with jump leads 19
6.	PRECAUTIONS FOR EMERGENCY RECOVERY 20
7.	PRECAUTIONS TO BE TAKEN DURING MAINTENANCE 21
7.1	• Warning notices 21
7.2	• Tools 21
7.3	• Personal precautions 21
7.4	• Equipment 22
7.5	• Keeping the machine clean. 22
7.6	• Running the engine during maintenance 22
7.7	• Rules for refuelling and adding oil 23
7.8	• Level of coolant in the radiator 23
7.9	• Using lamps 24
7.10	• Battery and alternator precautions 24
7.11	• Precautions regarding high pressure hoses 25
7.12	• Precautions to be taken when working on high pressure systems 25
7.13	• Precautions for maintenance work involving high temperatures and pressures 25
7.14	• The radiator cooling fan and fan belt. 26
8.	SAFETY AND NOISE ABATEMENT NOTICES. 27
8.1	• Location of safety notices 27
8.2	• Location of noise abatement notices. 28
TECHNICAL SPECIFICATIONS	
	• Overall dimensions with monoblock boom 30
	• Overall dimensions with articulated boom 30
	• Technical specifications 31
THE MACHINE AND ITS OPERATION	
9.	SAFETY DEVICES 34
9.1	• Equipment safety devices 34
10.	GENERAL VIEWS 35
10.1	• General view (monoblock boom) 35
10.2	• General view (articulated boom) 36