

Operation & Maintenance Manual

PC95R-2

HYDRAULIC EXCAVATOR

SERIAL NUMBERS **PC95R-2 -21D5200001** and up

This material is proprietary to Komatsu Utility Corporation and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu Utility Corporation.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or add improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, periodic revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

CONTENTS

1.1	FOREWORD	1
1.2	INFORMATION ON SAFETY	2
1.3	INTRODUCTION	4
1.3.1	INTENDED USES	4
1.3.2	IMPROPER OR UNAUTHORIZED USE	4
1.3.3	MAIN CHARACTERISTICS	5
1.3.4	RUNNING-IN	5
1.4	PRODUCT IDENTIFICATION	6
1.4.1	MACHINE SERIAL NUMBER	6
1.4.2	MACHINE IDENTIFICATION PLATE	6
1.4.3	ENGINE SERIAL NUMBER AND EMISSION LABEL	7
1.4.4	TRAVEL REDUCTION GEAR SERIAL NUMBER	7
1.4.5	SWING REDUCTION GEAR SERIAL NUMBER	8
1.4.6	CAB SERIAL NUMBER	8
1.4.7	SERIAL NUMBERS AND DEALER'S ADDRESS	9

SAFETY AND ACCIDENT PREVENTION

2.1	SAFETY PLATES	18
2.1.1	POSITION OF THE SAFETY PLATES	18
2.1.2	POSITION OF THE PICTOGRAMS	34
2.1.3	PICTOGRAMS AND RELEVANT MEANINGS	35
2.1.4	VIBRATIONS TO WHICH THE OPERATOR IS SUBJECTED	37
2.2	GENERAL PRECAUTIONS	38
2.2.1	GENERAL SAFETY RULES	38
2.2.2	SAFETY DEVICES AND GUARDS	38
2.2.3	CLOTHING AND PERSONAL PROTECTION ITEMS	38
2.2.4	UNAUTHORIZED MODIFICATIONS	39
2.2.5	LEAVING THE OPERATOR'S SEAT	39
2.2.6	GETTING ON AND OFF THE MACHINE	40
2.2.7	PREVENTING FIRES DUE TO FUEL AND OIL	40
2.2.8	PREVENTING BURNS	41
2.2.9	PREVENTING DAMAGE DUE TO ASBESTOS POWDER	41
2.2.10	PREVENTING DAMAGE CAUSED BY THE WORK EQUIPMENT	42
2.2.11	FIRE EXTINGUISHERS AND FIRST AID KIT	42
2.2.12	PRECAUTIONS CONCERNING THE CAB STRUCTURE	42
2.2.13	PRECAUTIONS CONCERNING THE EQUIPMENT	42
2.3	PRECAUTIONS TO BE TAKEN BEFORE STARTING THE ENGINE	43
2.3.1	SAFETY ON THE WORK SITE	43
2.3.2	FIRE PREVENTION	43
2.3.3	PRECAUTIONS TO BE TAKEN FOR THE OPERATOR'S CAB	43
2.3.4	ROOM VENTILATIONI	44
2.3.5	PRECAUTIONS TO BE TAKEN FOR THE LIGHTS	44
2.3.6	CLEANING THE WINDOWS AND THE REAR-VIEW MIRRORS - CHECKING THE WINDSHIELD WIPER BLADES	44

	Page
2.4 PRECAUTIONS TO BE TAKEN WHEN WORKING	45
2.4.1 STARTING THE ENGINE	45
2.4.2 CHECK THE DIRECTION BEFORE STARTING THE MACHINE	45
2.4.3 CHECKS FOR TRAVELLING IN REVERSE	45
2.4.4 MOVING THE MACHINE	46
2.4.5 MOVING ON SLOPES	47
2.4.6 WORKING ON SLOPES	48
2.4.7 UNAUTHORIZED OPERATIONS	48
2.4.8 PREVENTING ELECTROCUTION	49
2.4.9 VISIBILITY	50
2.4.10 WORKING ON ICY OR SNOW-COVERED SURFACES	50
2.4.11 PREVENTING DAMAGE CAUSED BY THE WORK EQUIPMENT	50
2.4.12 WORKING ON LOOSE GROUND	50
2.4.13 PARKING THE MACHINE	51
2.5 TRANSPORTING THE MACHINE ON OTHER VEHICLES	52
2.5.1 LOADING AND UNLOADING THE MACHINE	52
2.5.2 SHIPPING	52
2.6 BATTERY	53
2.6.1 SAFETY PRECAUTIONS FOR WORK ON BATTERIES	53
2.6.2 STARTING WITH BOOSTER CABLES	53
2.7 PRECAUTIONS FOR EMERGENCY RECOVERY	54
2.8 PRECAUTIONS TO BE TAKEN DURING MAINTENANCE	55
2.8.1 WARNING PLATES	55
2.8.2 TOOLS	55
2.8.3 PERSONNEL	56
2.8.4 EQUIPMENT	56
2.8.5 WORKING UNDER THE MACHINE	56
2.8.6 KEEPING THE MACHINE CLEAN	56
2.8.7 USE OF THE ENGINE DURING MAINTENANCE	57
2.8.8 PERIODICAL CHANGE OF THE PARTS THAT ARE CRITICAL FOR SAFETY	57
2.8.9 STOP THE ENGINE BEFORE CARRYING OUT ANY MAINTENANCE OPERATION OR INSPECTION	57
2.8.10 RULES FOR REFUELLING AND ADDING OIL	58
2.8.11 CHECKING THE COOLANT LEVEL IN THE RADIATOR	58
2.8.12 USING LAMPS	58
2.8.13 PRECAUTIONS CONCERNING THE BATTERY AND THE ALTERNATOR	59
2.8.14 PRECAUTIONS CONCERNING THE STARTER	59
2.8.15 PRECAUTIONS CONCERNING HIGH-PRESSURE HOSES	60
2.8.16 PRECAUTIONS TO BE TAKEN WHEN WORKING ON HIGH-PRESSURE SYSTEMS ...	60
2.8.17 PRECAUTIONS FOR MAINTENANCE WORK INVOLVING HIGH TEMPERATURES AND PRESSURES	60
2.8.18 COOLING FAN AND FAN BELT	61
2.8.19 WASTE MATERIALS	61