

SHOP MANUAL

KOMATSU

PW150-1

| | |
|----------------|--------------------|
| MACHINE MODEL | SERIAL No. |
| PW150-1 | 1001 and up |

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.
- PW-150-1 mounts the 6D95L-1 engine.
For details of engine, see the 95 Series Engine Shop Manual.

CONTENTS

| | No. of page |
|--|------------------------------|
| 01 GENERAL | 01-1 |
| 10 ENGINE | |
| 11 STRUCTURE AND FUNCTION | 11-1 |
| 12 TESTING AND ADJUSTING | 12-1 |
| 13 DISASSEMBLY AND ASSEMBLY | 13-1 |
| 20 POWER TRAIN | |
| 21 STRUCTURE AND FUNCTION | 21-1 |
| 22 TESTING AND ADJUSTING | See 62 TESTING AND ADJUSTING |
| 23 DISASSEMBLY AND ASSEMBLY | 23-1 |
| 24 MAINTENANCE STANDARD | 24-1 |
| 40 STEERING SYSTEM | |
| 41 STRUCTURE AND FUNCTION | 41-1 |
| 42 TESTING AND ADJUSTING | 42-1 |
| 43 DISASSEMBLY AND ASSEMBLY | 43-1 |
| 44 MAINTENANCE STANDARD | 44-1 |
| 50 AIR SYSTEM | |
| 51 STRUCTURE AND FUNCTION | 51-1 |
| 60 HYDRAULIC SYSTEM | |
| 61 STRUCTURE AND FUNCTION | 61-1 |
| 62 TESTING AND ADJUSTING | 62-1 |
| 63 DISASSEMBLY AND ASSEMBLY | 63-1 |
| 64 MAINTENANCE STANDARD | 64-1 |
| 70 WORK EQUIPMENT | |
| 71 STRUCTURE AND FUNCTION | 71-1 |
| 73 DISASSEMBLY AND ASSEMBLY | 73-1 |
| 74 MAINTENANCE STANDARD | 74-1 |
| 80 ELECTRIC AND ELECTRONIC SYSTEM | |
| 81 STRUCTURE AND FUNCTION | 81-1 |
| 90 OTHERS | 91-1 |