

# SHOP MANUAL

## **KOMATSU**

# **PW210-1**

MACHINE MODEL    SERIAL No.

**PW210-1            10001 and up**

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.
- PW210-1 mount the S6D105-1 engine.  
For details of the engine, see the 6D105 Series Engine Shop Manual.

# CONTENTS

	No. of page
<b>10 ENGINE</b>	
11 STRUCTURE AND FUNCTION .....	11-1
12 TESTING AND ADJUSTING .....	12-1
13 DISASSEMBLY AND ASSEMBLY .....	13-1
<b>20 POWER TRAIN</b>	
21 STRUCTURE AND FUNCTION .....	21-1
23 DISASSEMBLY AND ASSEMBLY .....	23-1
24 MAINTENANCE STANDARD .....	24-1
<b>40 STEERING SYSTEM</b>	
41 STRUCTURE AND FUNCTION .....	41-1
42 TESTING AND ADJUSTING .....	42-1
43 DISASSEMBLY AND ASSEMBLY .....	43-1
44 MAINTENANCE STANDARD .....	44-1
<b>50 AIR SYSTEM</b>	
51 STRUCTURE AND FUNCTION .....	51-1
<b>60 HYDRAULIC SYSTEM</b>	
61 STRUCTURE AND FUNCTION .....	61-1
62 TESTING AND ADJUSTING .....	62-1
63 DISASSEMBLY AND ASSEMBLY .....	63-1
64 MAINTENANCE STANDARD .....	64-1
<b>80 ELECTRIC AND ELETRONIC SYSTEM</b>	
81 STRUCTURE AND FUNCTION .....	81-1
82 TESTING AND ADJUSTING .....	82-1