

# Operation & Maintenance Manual

# PW400MH-6

## WHEEL EXCAVATOR

**SERIAL NUMBERS PW400MH-6 A84210 and up**

**ENGINE 6D125E-2**

This material is proprietary to Komatsu America International Company and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America International Company.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

**TABLE OF CONTENTS**

**INTRODUCTION**

FOREWORD ..... 0-2  
 SAFETY INFORMATION ..... 0-2  
 INTRODUCTION ..... 0-3  
     INTENDED USE ..... 0-3  
     FEATURES ..... 0-3  
     BREAKING IN THE MACHINE ..... 0-3  
 LOCATION OF PLATES, TABLE TO ENTER P.I.N. AND DISTRIBUTOR ..... 0-4  
     P.I.N. PLATE LOCATION ..... 0-4  
     ENGINE SERIAL NO. PLATE LOCATION ..... 0-4  
     TABLE TO ENTER NUMBERS AND DISTRIBUTOR ..... 0-4  
 TABLE OF CONTENTS ..... 0-5

**SAFETY**

WARNING LABELS ..... 1-2  
 GENERAL PRECAUTIONS ..... 1-8  
     SAFETY RULES ..... 1-8  
     SAFETY FEATURES ..... 1-8  
     UNAUTHORIZED MODIFICATION ..... 1-8  
     INSIDE OPERATOR’S COMPARTMENT ..... 1-9  
     CLOTHING AND PERSONAL PROTECTIVE ITEMS ..... 1-9  
     ALWAYS APPLY LOCK WHEN LEAVING OPERATOR’S SEAT ..... 1-9  
     MOUNTING AND DISMOUNTING ..... 1-10  
     INJURY FROM WORK EQUIPMENT ..... 1-10  
     FIRE PREVENTION FOR FUEL AND OIL ..... 1-10  
     PRECAUTIONS AT HIGH TEMPERATURES ..... 1-11  
     ASBESTOS DUST HAZARD PREVENTION ..... 1-11  
     FIRE EXTINGUISHER AND FIRST AID KIT ..... 1-11  
     CAB GLASS ..... 1-12  
     WINDOW WASHER FLUID ..... 1-12  
     ESCAPE FROM FIRE ..... 1-12  
     PROTECTION AGAINST FALLING OR FLYING OBJECTS ..... 1-12  
     MACHINES WITH ACCUMULATOR ..... 1-13  
     PRECAUTIONS FOR ATTACHMENTS ..... 1-13  
     INDOOR VENTILATION ..... 1-13  
     EMERGENCY EXIT FROM OPERATORS CAB ..... 1-13  
 PRECAUTIONS DURING OPERATION ..... 1-14  
     BEFORE STARTING ENGINE ..... 1-14  
         SAFETY AT WORK SITE ..... 1-14  
         FIRE PREVENTION ..... 1-14  
         VENTILATION FOR ENCLOSED AREAS ..... 1-14  
         IN OPERATOR’S CAB ..... 1-14  
         PRECAUTIONS FOR MIRROR AND LIGHTS ..... 1-15  
         WHEN STARTING ENGINE ..... 1-15  
     OPERATING MACHINE ..... 1-16  
         WHEN STARTING ENGINE ..... 1-16  
         CHECK DIRECTION BEFORE STARTING MACHINE ..... 1-16  
         CHECK THAT NO ONE IS IN AREA BEFORE SWINGING OR TRAVELING IN REVERSE ..... 1-16  
         NEVER LET ANYONE RIDE ON ATTACHMENT ..... 1-16  
         PRECAUTIONS WHEN TRAVELING ..... 1-17  
         OPERATE CAREFULLY ON SNOW ..... 1-17  
         TRAVELING ON SLOPES ..... 1-18  
         PROHIBITED OPERATIONS ..... 1-18  
         PRECAUTIONS FOR OPERATION ..... 1-19  
         DO NOT GO CLOSE TO HIGH VOLTAGE CABLES ..... 1-19  
         WORKING ON LOOSE GROUND ..... 1-20  
         PARKING THE MACHINE ..... 1-20

## **INTRODUCTION**

PRECAUTIONS IN COLD WEATHER . . . . .	1-20
TRANSPORTATION . . . . .	1-21
LOADING AND UNLOADING . . . . .	1-21
PRECAUTIONS WHEN LIFTING . . . . .	1-21
SHIPPING . . . . .	1-21
BATTERY . . . . .	1-22
BATTERY HAZARD PREVENTION . . . . .	1-22
STARTING WITH BOOSTER CABLES . . . . .	1-22
CHARGING BATTERY . . . . .	1-23
TOWING . . . . .	1-24
PRECAUTIONS WHEN TOWING . . . . .	1-24
PRECAUTIONS FOR MAINTENANCE . . . . .	1-25
BEFORE CARRYING OUT MAINTENANCE . . . . .	1-25
CONTACT WHEN THERE IS FAILURE . . . . .	1-25
WARNING TAG . . . . .	1-25
CLEAN BEFORE INSPECTION OR MAINTENANCE . . . . .	1-25
NEAT CLEAN WORK PLACE . . . . .	1-25
FOLLOW LEADER IN OPERATIONS WITH OTHER WORKERS . . . . .	1-25
RADIATOR COOLANT LEVEL . . . . .	1-26
PROPER TOOLS . . . . .	1-26
STOP ENGINE PRIOR TO INSPECTION AND MAINTENANCE . . . . .	1-26
SUPPORT FOR WORK EQUIPMENT . . . . .	1-26
PERIODIC REPLACEMENT OF CRITICAL SAFETY PARTS . . . . .	1-27
USE OF LIGHTING . . . . .	1-27
FIRE PREVENTION . . . . .	1-27
RULES TO FOLLOW WHEN ADDING FUEL OR OIL . . . . .	1-27
DURING MAINTENANCE . . . . .	1-28
PERSONNEL . . . . .	1-28
REMOVAL, INSTALLATION AND STORAGE OF ATTACHMENTS . . . . .	1-28
WORK UNDER THE MACHINE . . . . .	1-28
NOISE . . . . .	1-28
WHEN WORKING ON MACHINE . . . . .	1-28
LOCK INSPECTION COVERS . . . . .	1-28
TWO WORKERS FOR MAINTENANCE WHEN ENGINE IS RUNNING . . . . .	1-29
DO NOT DROP TOOLS OR PARTS INSIDE MACHINE . . . . .	1-29
FLYING PIECES WITH HAMMER WORK . . . . .	1-29
KEEP THE MACHINE CLEAN . . . . .	1-29
WELDING REPAIRS . . . . .	1-30
REMOVE BATTERY TERMINALS . . . . .	1-30
ACTION WHEN ABNORMALITY IS FOUND DURING INSPECTION . . . . .	1-30
RULES TO FOLLOW WHEN ADDING FUEL . . . . .	1-30
HANDLING HIGH PRESSURE HOSES . . . . .	1-31
PRECAUTIONS WITH HIGH PRESSURE OIL . . . . .	1-31
PRECAUTIONS FOR MAINTENANCE AT HIGH TEMPERATURE OR PRESSURE . . . . .	1-31
WASTE MATERIALS . . . . .	1-32
CHECKS AFTER INSPECTION AND MAINTENANCE . . . . .	1-32
MAINTENANCE FOR AIR CONDITIONER . . . . .	1-32
MAGNET SAFETY . . . . .	1-33
READ THE MAGNET INSTRUCTIONS . . . . .	1-33
BEWARE OF HIGH VOLTAGE . . . . .	1-33
HANDLE MAGNET WITH CARE . . . . .	1-33

## **OPERATION**

GENERAL . . . . .	2-2
GENERAL VIEW OF MACHINE . . . . .	2-2
GENERAL VIEW OF OPERATORS COMPARTMENT . . . . .	2-3
GENERAL VIEW OF MONITOR PANEL . . . . .	2-4
GENERAL VIEW OF OUTRIGGER PANEL . . . . .	2-5
GENERAL VIEW OF MAGNET PANEL . . . . .	2-6
EXPLANATION OF COMPONENTS . . . . .	2-7
MACHINE MONITOR . . . . .	2-7