

SEAM020B0303

Operation & Maintenance Manual

KOMATSU

PW60-3

HYDRAULIC EXCAVATOR

SERIAL NUMBERS
PW60 -2001 and up

CONTENTS

OPERATION	
SAFETY HINTS . . . ▲	4
GENERAL LOCATIONS AND SPECIFICATIONS	12
INSTRUMENTS AND CONTROLS	13
CHECK BEFORE STARTING	38
OPERATING YOUR MACHINE	44
EXCAVATOR'S WORK	59
INVERSION AND REPLACEMENT OF BUCKET	60
HANDLING THE TIRES	61
HANDLING OF BATTERY	63
TRANSPORTATION	66
COLD WEATHER OPERATION	68

MAINTENANCE	
PERIODIC MAINTENANCE	73
PRECAUTIONS FOR MAINTENANCE	74
PERIODICAL REPLACEMENT OF SAFETY PARTS	79
MAINTENANCE TABLE	80
OIL FILLER AND LEVEL GAUGE POSITIONS	83
EVERY 50 HOURS SERVICE	84
EVERY 100 HOURS SERVICE	84
EVERY 250 HOURS SERVICE	87
EVERY 500 HOURS SERVICE	93
EVERY 1000 HOURS SERVICE	97
EVERY 2000 HOURS SERVICE	99
WHEN REQUIRED	105
ADJUSTMENT	115
HANDLING OUTRIGGER	119
TROUBLE SHOOTING GUIDE	121
STORAGE	125
SERVICE METER	126
MACHINE AND ENGINE SERIAL NUMBERS	127
FUEL, COOLANT AND LUBRICANTS	128